

1

Combine the profiles coming out of the product box on a flat surface (the table is the most appropriate) with an allen key as shown in the figure.


hex key

2

EN: Connect the red and black wires to the connectors and lock them.

3

EN: After adjusting the assembled panel frame to the desired level on the wall surface, mark it on the 4 holes with a pencil.

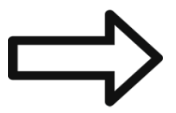


4

Drill the marks created on the wall surface with a drill bit and insert the dowels.

**5**

Panels are screwed to the wall. Then, mount the special translucent fabric with the image you prefer frontside on the panel.

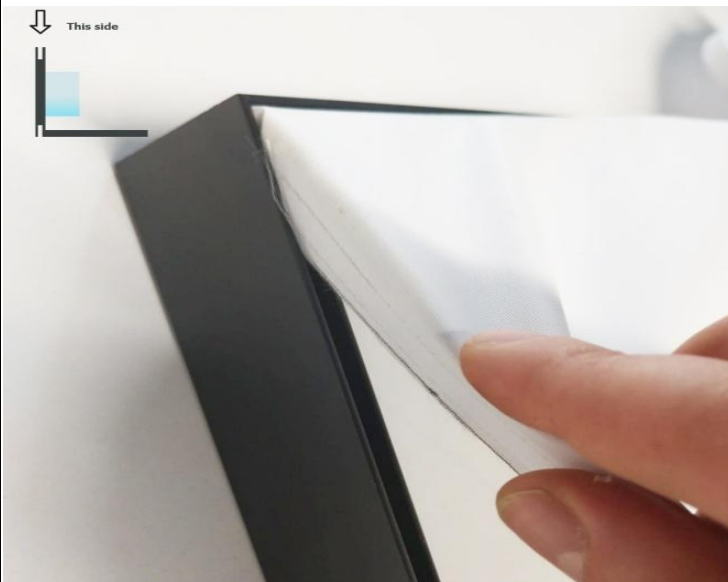**EN: connecting electricity**

Plug the cable socket on the panel directly into the electrical socket.

EN: Advices:

After completing the false window installation, you can decorate your window with various curtain models to get a more realistic look.